

FU2200A

Multifunction Power Meter with Data Logger

FU2200A is a three-phase multifunction power and energy meter manufactured by GFUVE. The meter provide excellent value for monitoring power and energy management systems. It may be used as data gathering devices for intelligent power distribution or plant automation systems. All monitored data is available via a standard digital RS485 communication port running the Modbus RTU protocol. It has the PC software and the data logger function, which can set by end users from 1min to 60min intervals to record. You can read the data through a PC. Also, you can share the data in the Internet LAN. By the way, it can measure the harmonics. With a wide range of models to choose from, the FU2200A power meter offers unparalleled value and functionality.



Features

1. True-RMS measuring parameters
2. ANSI and IEC 0.2 accuracy class
3. Power quality analysis
4. 4 quadrant energy
5. 2MB onboard memory, can be extended to 16M
6. Data logging
7. High-speed RS485, Ethernet port (option)
8. Measure individual harmonics from 2nd to 49th (option)
9. TOU, 4 Tariffs, 6 Seasons, 6 Schedules
10. Class leading warranty
11. With PC management software; web browse data

Applications

1. Metering of distribution feeders, transformers, generators, capacitor banks and motors
3. Medium and low voltage systems
4. Commercial, industrial, utility
5. Power quality analysis
6. Data logging
7. Monitoring system



Архангельск (8182)63-90-72
 Астана (7172)727-132
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89
 Иваново (4932)77-34-06

Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16

Пермь (342)205-81-47
 Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
 Тверь (4822)63-31-35
 Томск (3822)98-41-53
 Тула (4872)74-02-29
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (772)734-952-31

Parameters

Electrical parameters

Power Supply (AC/DC)	AC85-400V / DC85-330V Power consumption: <4VA
Measurement Parameters	Voltage (Ph-N); Voltage (Ph-Ph); Current; Frequency; PF; Active Power(W); Reactive Power(Q); Apparent Power(S), 2nd to 49th harmonics(option)
Harmonics	Total harmonics ratio of phase-voltage Total harmonics ratio of current 2nd to 49th harmonics ratio of phase-voltage 2nd to 49th harmonics ratio of current
Maximum Value & Minimum Value	Voltage, current, frequency, active power, reactive power, apparent power, demandP, demandQ, demandS.
Computation	Forward active power energy Reverse active power energy Forward active power energy Reverse reactive power energy
Measuring Range	0-400V (0-800V is optional), 0-6A, 45-65Hz, -1 ~ 0 ~ 1
Measuring Accuracy	Voltage: 0.5%RD±0.05%FS Current: 0.5%RD±0.05%FS Active Power: 0.5%RD±0.05%FS Reactive Power: 1.5%RD +0.05%FS Apparent power: 0.5%RD +0.1%FS Power Factor: 0.5%RD Frequency: 0.05%RD Active Energy: 0.5%
Maximum Demand	Ia, Ib, Ic, ΣPtotal, ΣQtotal, ΣStotal, 15 minutes
Display	Blue back-lit LCD Display 5 display figures 4 operation keys
Communication	Support RS-485 interface port, 32 (128) Networking ModBus-TCP/IP, SNMP communication protocol Ethernet 10/100M port (RJ45)
Memory	2M onboard memory, can be extended to 16M. Data logger interval can set by end users from 1min to 60min. The default is 15min. You can read the data through a PC, also you can select the data to display and store from software.
Programmable	Measuring system: 3P4W/3P3W etc Transformation Ratio: PT 1-10000; CT 1-10000

Electrical parameters - continued

Energy pulse	Provides active & reactive energy pulse output Pulse parameters can be chosen Range: 0.1-10000kWh/kvarh Dry contact output (1Ax100V)
Connection mode	3P4W, 3P4W BAL, 3P3W, 3P3W BAL, 1P3W, 1P2W
Baud	1200-57600, Standard 38400

Mechanical parameters

Dimensions (L x W x H) (mm)	96 x 96 x 12.8
Mounting	Panel mounting Trepanning: 92x92mm The thickness of installation: 51mm

Environmental conditions

Temperature	-5 to +50 °C
Humidity	20%-95%RH, without condensation
Warranty	Three years warranty

Index

Parameters	Accuracy	Resolution	Measuring range	Show on the display
Voltage	0.20%	0.01V	0-400V	0.5-500kV
Current	0.20%	0.01mA	0-6.5A	5mA-50000A
Active power	0.50%	0.2W	0-2400W/phase	-9999MW to +9999MW
Reactive power	2%	0.2var	0-2400var/phase	-9999Mvar to +9999Mvar
Apparent power	0.50%	0.2VA	0-2400VA/phase	0-9999MVA
Active demand	0.50%	0.2W	0-2400W/phase	-9999MW to +9999MW
Reactive demand	2%	0.2var	0-2400var/phase	-9999Mvar to +9999Mvar
Apparent demand	0.50%	0.2VA	0-2400VA/phase	0 to 9999MVA
Power factor	0.005	0.0001	-2	-2
Frequency	0.01Hz	0.01Hz	45.000-65.000Hz	45.000-65.000Hz
Active energy	0.5%,0.2% (Option)	0.001kWh	0-999999.999kWh	0-99999999.9kWh
Reactive energy	2%	0.001kvarh	0-999999.999kvarh	0-99999999.9kvarh
Apparent energy	0.50%	0.001VAh	0-999999.999kVAh	0-99999999.9kVAh
Phase angle	0.1°	0.01°	0-359.99°	0-359.99°
Unbalance	2%	0.01%	0-300.00%	0-300.00%
PT ratio		1		1-10000
CT ratio		1		1-10000
Address code		1		1-253

Software Interface From FU2200A

Max & Min data

The screenshot displays a 'Readings' window with a 'Parameters' tab. It lists various parameters such as Energy, Voltage (U1, U2, U3), and Power (P1, P2, P3) with their respective maximum and minimum values. A 'Read' button is visible at the bottom left.

Energy include TOU

The screenshot shows the 'Energy include TOU' section in the 'Readings' window. It lists parameters for different time periods (E1, E2, E3) and their corresponding values. A 'Read' button is visible at the bottom left.

Real time metering

The screenshot displays the 'Real Time Metering' section in the 'Readings' window. It shows real-time values for parameters like Voltage (U1, U2, U3), Power (P1, P2, P3), and Frequency (F1, F2, F3). A 'Read' button is visible at the bottom left.

General parameter

The screenshot shows the 'General Parameter' configuration window. It contains various input fields for parameters such as IP Address, Password, and other system settings. A 'Download' button is visible at the bottom left.








Data Logging From FU2200A

The screenshot displays the 'DataLog1' window, which contains a table of logged data. The table has columns for No, YYYY-MM-DD hh:mm:ss, U1(V), U2(V), U3(V), U1avg(V), U12(V), U23(V), U31(V), U1avg(V), I1(A), I2(A), I3(A), Iavg(A), In(A), P1(kW), P2(kW), P3(kW), and Psi.

No	YYYY-MM-DD hh:mm:ss	U1(V)	U2(V)	U3(V)	U1avg(V)	U12(V)	U23(V)	U31(V)	U1avg(V)	I1(A)	I2(A)	I3(A)	Iavg(A)	In(A)	P1(kW)	P2(kW)	P3(kW)	Psi
1	2015-02-03 13:59:00	99.96	99.95	99.96	99.95	173.14	173.10	173.14	173.12	1.000	0.999	1.000	0.999	0.000	0.050	0.050	0.050	0
2	2015-02-03 14:00:00	99.96	99.95	99.96	99.95	173.14	173.10	173.14	173.12	1.000	1.000	1.000	1.000	0.000	0.050	0.050	0.050	0
3	2015-02-03 14:01:00	99.96	99.95	99.96	99.95	173.14	173.10	173.14	173.12	1.000	1.000	1.000	1.000	0.000	0.050	0.050	0.050	0
4	2015-02-03 14:02:00	99.96	99.95	99.96	99.95	173.14	173.10	173.14	173.12	1.000	1.000	1.000	1.000	0.000	0.050	0.050	0.050	0
5	2015-02-03 14:03:00	99.97	99.95	99.96	99.96	173.15	173.10	173.15	173.13	1.000	1.000	1.000	1.000	0.000	0.050	0.050	0.050	0
6	2015-02-03 14:04:00	99.96	99.95	99.96	99.95	173.14	173.10	173.14	173.12	1.000	1.000	1.000	1.000	0.000	0.050	0.050	0.050	0
7	2015-02-03 14:05:00	99.96	99.95	99.97	99.96	173.14	173.11	173.15	173.13	4.998	4.998	4.998	4.998	0.000	0.250	0.250	0.250	0
8	2015-02-03 14:06:00	99.96	99.95	99.97	99.96	173.14	173.11	173.15	173.13	4.999	4.998	4.998	4.998	0.000	0.250	0.250	0.250	0
9	2015-02-03 14:07:00	99.96	99.95	99.97	99.96	173.14	173.11	173.15	173.13	4.998	4.998	4.998	4.998	0.000	0.250	0.250	0.250	0

At the bottom of the window, there is a status bar showing 'Download Stamp End Success', 'Tx: FF FF 00 00 04 EE 14 23 06 00 01 00 0A 00', 'Rx: FF FF 00 00 03 EE 83 02', and 'TCP 2015-02-03 14:05:51'.

Wiring Diagram

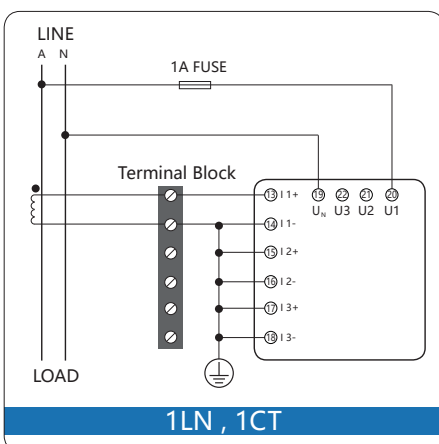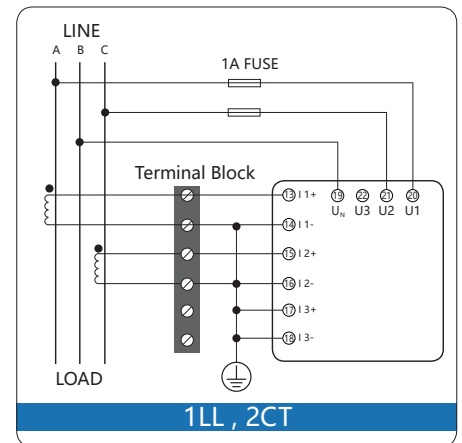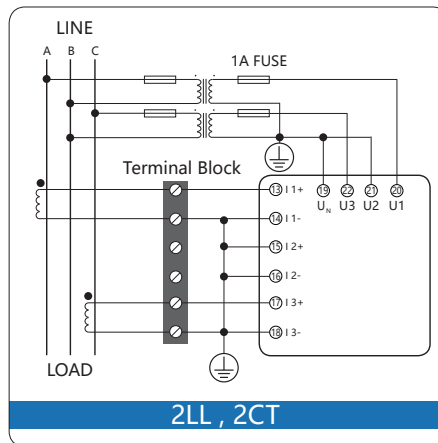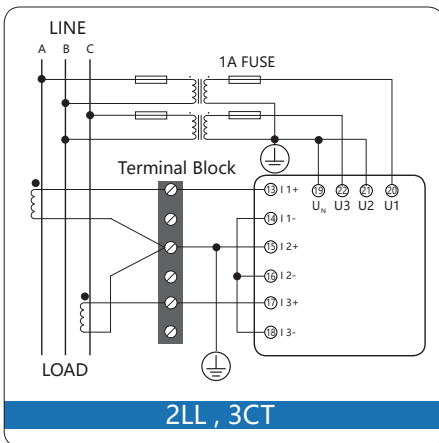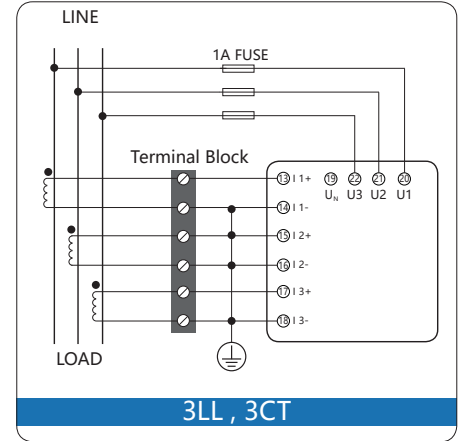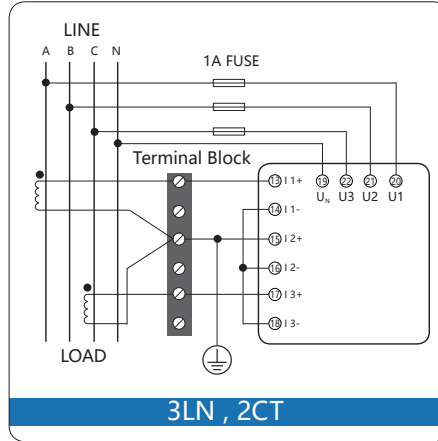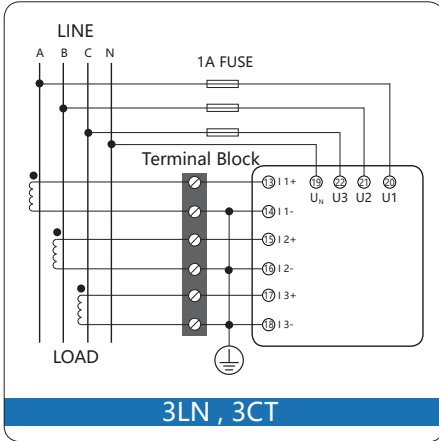

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Волгодла (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (772)734-952-31